
# **Brick**com


# **NVR- Network Video Server**

FAE Team 2012.3


# **Agenda**

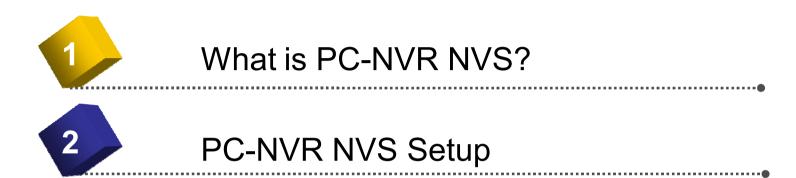

What is PC-NVR NVS: Remote live view service of PC-NVR via Windows IE brwoser.

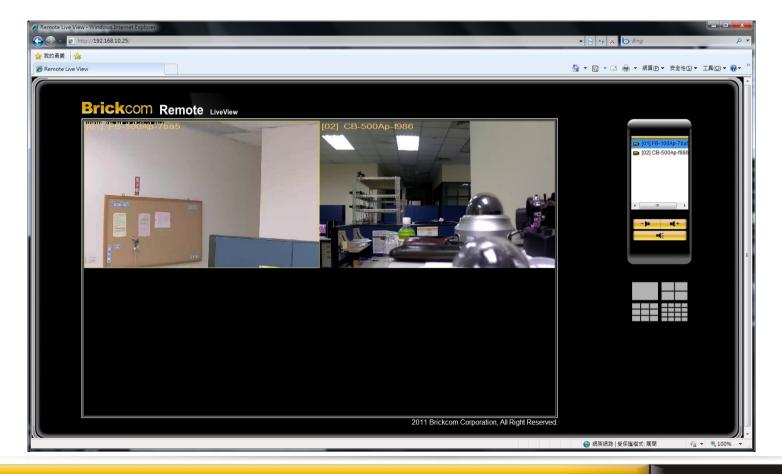


#### **NVS Setup**

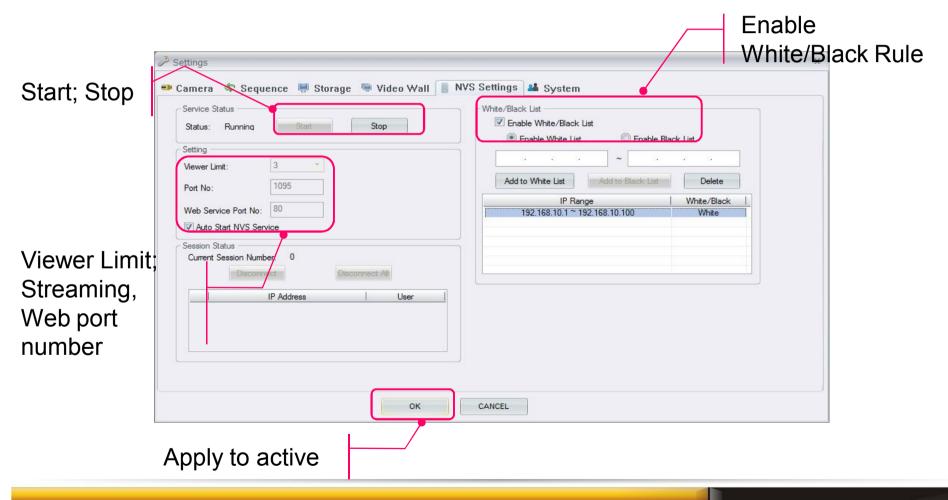


Keyin IP address of PC-NVR and then install ActiveX moudle to client side.

IP address of PC-NVR

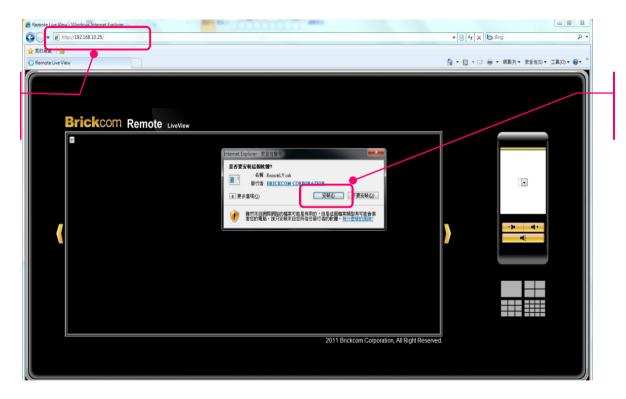


Install ActiveX to active live view

Keyin Username and Password to login.

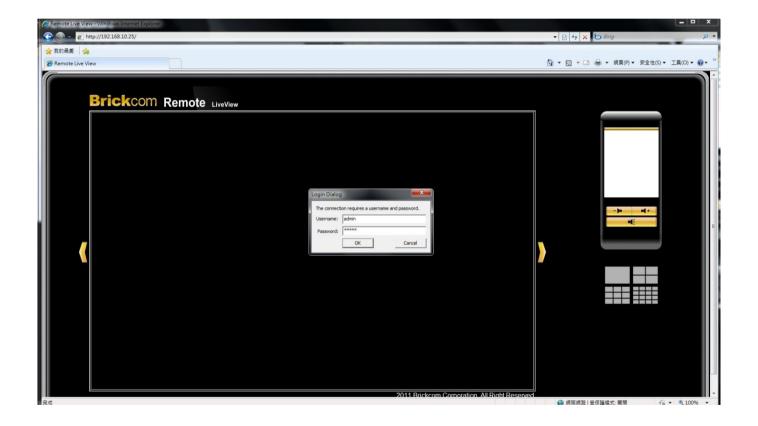


User can live view remotely via Windows IE brwoser.

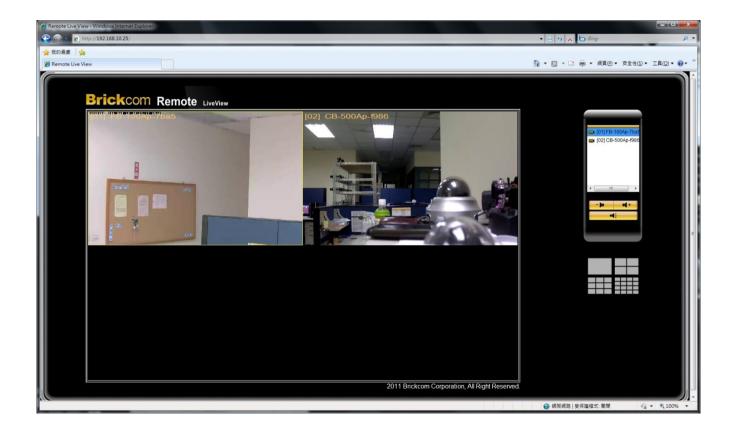


Session status to show how many users to active Remote live view.

Session Status

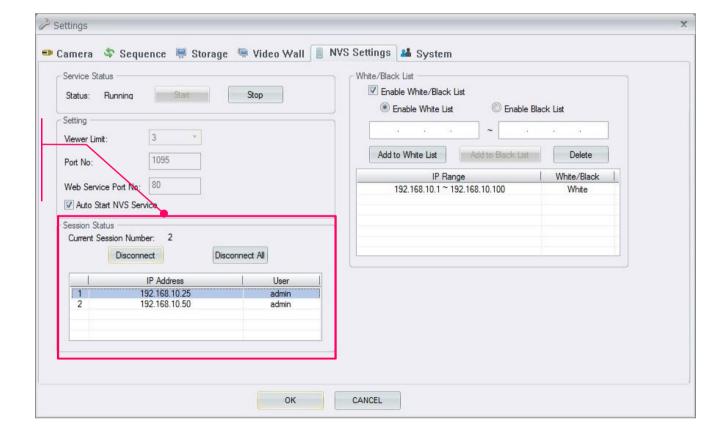

### **Contact Us**

<b>Brickcom Corporation Headquarters</b>	
Address	No.1 Jen Ai Rd, Hsinchu Industrial Park, Hukou, Hsinchu, Taiwan, R.O.C. 303
Tel	+886-3-5982022
Fax	+886-3-5982023
Website	http://www.brickcom.com
Sales & Marketing	info@brickcom.com
Support	support@brickcom.com

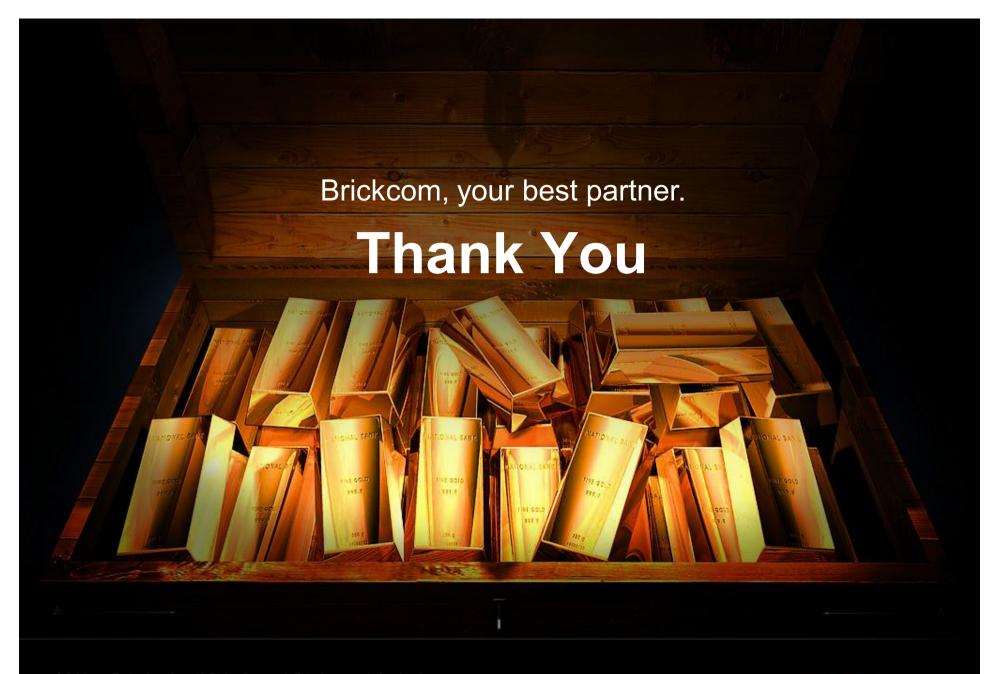

© Brickcom Technology Inc., All Rights Reserved. This document is for planning purposes only, and is not intended to modify or supplement any specifications or warranties relating to products of Brickcom Technology. Brickcom may make changes to specifications and descriptions at any time, without notice.

**Brick**com